

Technical Specifications

Infrared	Internal IR Receiver & Transmitter Optional external IR Transmitter (4x) and Receiver (1x)
Mounting	Simple attachment via provided velcro tape
Power Supply	5VDC via Micro USB Connector
Power Consumption	typ. 0.1W
Radio Frequency	868MHz (SRD Band Europe), 915MHz (ISM Band Region 2) max. Power 3.16mW
Ambient Temperature	0...55°C / 32...131°F
Humidity	95% r. H. (non condensing)
Dimensions	90x49x14mm / 3.54x1.93x0.55"
Safety Protection	IP20

LOXONE

Need Help?

loxone.com/support

Loxone Electronics GmbH
Smart Home 1
4154 Kollerschlag
Austria

loxone.com



VZ21119

LOXONE



IR Control Air

Part No: **100141**

About the product

With the IR Control Air you can seamlessly integrate infrared devices into your Loxone Smart Home. For example your TV, and other cinema equipment, projectors, aircon units and more.

Features

- Infrared Communication
- Easy mounting
- Optional external IR Transmitters and Receivers

Information

Contains FCC ID: COR-ZWIR4512AC1

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation



For additional information, declaration of conformity, visit www.loxone.com/help/ir-control-air

Installation

Mount the product near the device you want to communicate with using the provided velcro. Make sure that the internal sensors are in visibility of the IR Receiver or Transmitter, if not use the provided external IR Receiver or Transmitters. Power up the device with the provided power supply. Once powered pair the device with your Miniserver using Loxone Config.

